

The item can be found on www.CedarwoodFurniture.com

Call 877-595-8537 to order

IMPORTANT PLACEMENT:

To prevent the possibility of this product tipping over, it MUST be placed on a hard, level surface such as concrete or heavy concrete stepping stones.

NEVER PLACE THIS RACK ON DIRT OR ANY OTHER UNSTABLE SUR FACE. CHILDREN SHOULD NEVER BE ALLOWED TO PLAY O'N RACK.

COVER: Woodhaven was the first to design covers to cover firewood the way it needs to be! It keeps the top dry and ready to burn, and allows for air to flow through the firewood to reduce mold and mildew and promote curing. Our standard cover fits over the corner posts.

The Crescent™ Firewood Rack


Thank you for purchasing this quality product, Made in the USA!

Parts List			
Letter	Description	Image	Quantity
Α	Bottom Section		2
В	Base	(• n n •)	2
С	Upper Arc Section		4
D	Lower Arc Section		2
E	Bracket		3
F	1" X 2" Stainless Bolt		10
G	⅓" Flange Nut		10
Н	3" X 3½"Stainless Bolt		4
I	ੰਗ Flange Nut		4
J	3" Washer		4

Page 1 of 3


The Crescent™ Firewood Rack

Assembly Instructions:

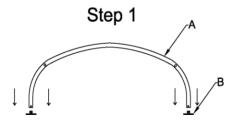

Slide the two bottom sections (A) over the base plate tubes (B) and and bolt together using 1/4" Bolts and Nuts (F and G).


Step 2

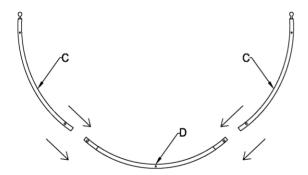


Slide the ends of the upper section (C) over the ends of the bottom of the upper section (D) Do not bolt together.

Page 2 of 3

The Crescent™ Firewood Rack

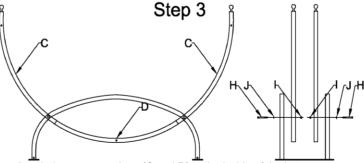

 Attach the upper sections (C and D) to the inside of the bottom section (A) using the $\frac{3}{8}$ bolts, washers, and nuts. Place the bolts and washers on the outside with the nuts inside. These bolts will connect section C to section D as well as the entire upper unit to the bottom section (A).



Bolt the spacer straps (E) over the outside of the tubes on both ends of the rack and the bottom using $\frac{1}{4}$ " Bolts (F). Place bolt head on the outside and nut (G) on the inside.

Page 3 of 3

The item can be found on www.CedarwoodFurniture.com

Call 877-595-8537 to order