

# Appendix C: Settings

## Tier 2 Menus

SYSTEM PROGRAMMING	SECURITY	PARTITION	PHONES	CS PHONE 1	CS PHONE 2	CS PHONE 3
B▼ ▲A	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★
Demo Kit On Off	GLOBAL	PARTITION	CS PHONE 1	CS PHONE 2	CS PHONE 3	
B▼ ▲A	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★	#▼ ▲*★
Partition 1 Copy	Downloader Code 12345 (0000)	Account Number 00000 (0010 - 0060)	Phone Number None (01000)	Phone Number None (01010)	Phone Number None (01020)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
Clear Memory	Installer Code 4321 (0001)	Quick Arm On Off (0011 - 0061)	High Lvl Rpts On Off (01001)	High Lvl Rpts On Off (01011)	High Lvl Rpts On Off (01021)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
Exit Programming	Dealer Code **** (0002)	Quick Exit On Off (0012 - 0062)	Low Lvl Rpts On Off (01002)	Low Lvl Rpts On Off (01012)	Low Lvl Rpts On Off (01022)	
#	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
	Access Code Lock On Off (0003)	Exit Extension On Off (0013 - 0063)	Exception Rpts On Off (01003)	Exception Rpts On Off (01013)	Exception Rpts On Off (01023)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
	Ptn Security On Off (0004)	Keyswitch Sensor None (0014 - 0064)	Open/Close Rpts On Off (01004)	Open/Close Rpts On Off (01014)	Open/Close Rpts On Off (01024)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
	Multi Ptn Arm None (0005)	Keyswitch Style Transition State (0015 - 0065)	Backup On Off (01005)	Backup On Off (01015)	Backup On Off (01025)	
	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
	Keychain TP Ptn (0006)	Duress Code **** (0016 - 0066)	Reporting Format SIA CID (01006)	Reporting Format SIA CID (01016)	Reporting Format SIA CID (01026)	
			B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A
			Cellular Backup On Off (01007)	Cellular Backup On Off (01017)	Cellular Backup On Off (01027)	

**PHONES (cont.)**

B▶  
◀A

#▼ ▲\*

PAGER 1	PAGER 2	PAGER 3	PAGER 4	PAGER 5	DOWNLOADER PHONE
#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*	#▼ ▲*
Phone Number <u>None</u> (01030)	Phone Number <u>None</u> (01040)	Phone Number <u>None</u> (01050)	Phone Number <u>None</u> (01060)	Phone Number <u>None</u> (01070)	Phone Number <u>None</u> 01090
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
High Lvl Rpts <u>On Off</u> (01031)	High Lvl Rpts <u>On Off</u> (01041)	High Lvl Rpts <u>On Off</u> (01051)	High Lvl Rpts <u>On Off</u> (01061)	High Lvl Rpts <u>On Off</u> (01071)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
Low Lvl Rpts <u>On Off</u> (01032)	Low Lvl Rpts <u>On Off</u> (01042)	Low Lvl Rpts <u>On Off</u> (01052)	Low Lvl Rpts <u>On Off</u> (01062)	Low Lvl Rpts <u>On Off</u> (01072)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
Exception Rpts <u>On Off</u> (01033)	Exception Rpts <u>On Off</u> (01043)	Exception Rpts <u>On Off</u> (01053)	Exception Rpts <u>On Off</u> (01063)	Exception Rpts <u>On Off</u> (01073)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
Open/Close Rpts <u>On Off</u> (01034)	Open/Close Rpts <u>On Off</u> (01044)	Open/Close Rpts <u>On Off</u> (01054)	Open/Close Rpts <u>On Off</u> (01064)	Open/Close Rpts <u>On Off</u> (01074)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
Latchkey Rpts <u>On Off</u> (01035)	Latchkey Rpts <u>On Off</u> (01045)	Latchkey Rpts <u>On Off</u> (01055)	Latchkey Rpts <u>On Off</u> (01065)	Latchkey Rpts <u>On Off</u> (01075)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
Streamlining <u>On Off</u> (01036)	Streamlining <u>On Off</u> (01046)	Streamlining <u>On Off</u> (01056)	Streamlining <u>On Off</u> (01066)	Streamlining <u>On Off</u> (01076)	
B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	B▼ ▲A	
Ptn Assignment 1 2 3 4 5 6 (01037)	Ptn Assignment 1 2 3 4 5 6 (01047)	Ptn Assignment 1 2 3 4 5 6 (01057)	Ptn Assignment 1 2 3 4 5 6 (01067)	Ptn Assignment 1 2 3 4 5 6 (01077)	

B▶  
◀A

## PHONE OPTIONS

#▼ ▲\*

### GLOBAL

#▼ ▲\*

Phone Test  
On Off  
(02000)

B▼ ▲A

Auto Phone Test  
On Off  
(02001)

B▼ ▲A

Auto Test Reset  
On Off  
(02002)

B▼ ▲A

Comm Failure  
On Off  
(02003)

B▼ ▲A

DTMF Dialing  
On Off  
(02004)

B▼ ▲A

Dial Abort Delay  
30 sec (15-45)  
(02006)

B▼ ▲A

Cancel Message  
On Off  
(02007)

B▼ ▲A

Pager Delay  
15 sec (0-30)  
(02008)

B▼ ▲A

Call Wait Cancel  
On Off  
(02009)

B▼ ▲A

Dial Tone Detect  
On Off  
(02010)

B▶  
◀A

### PARTITION

#▼ ▲\*

Local Phone Ctrl  
On Off  
(0210 - 0260)

B▼ ▲A

Remote Access  
On Off  
(0211 - 0261)

B▼ ▲A

Ring/Hang/Ring  
On Off  
(0212 - 0262)

B▼ ▲A

Line Fail Delay  
None (10-240 sec)  
(0213—Ptn 1 only)

B▼ ▲A

Toll Saver  
On Off  
(0214 - 0264)

B▼ ▲A

Phone Panic  
On Off  
(0215 - 0265)

B▼ ▲A

Phone ACC Key  
# \*  
(0216 - 0266)

B▶  
◀A

## TIMERS

#▼ ▲\*

### GLOBAL

#▼ ▲\*

Supervisory Time  
1:00 - 4:00 (Random)  
(0300)

B▼ ▲A

RF Tx Timeout  
12 hours (2-24)  
(0302)

B▼ ▲A

Phone Test Freq.  
7 days (1-255)  
(0303)

B▼ ▲A

Next Phone test  
7 days (1-255)  
(0304)

B▼ ▲A

Output Trip Time  
4 sec (1-12)  
(0305)

B▼ ▲A

Activity Timeout  
24 hours (1-42)  
(0306)

B▼ ▲A

Daylight Saving  
On Off  
(0307)

B▶  
◀A

### PARTITION

#▼ ▲\*

Entry Delay  
30 sec (30-240)  
(0310 - 0360)

B▼ ▲A

Exit Delay  
60 sec (45-184)  
(0011 - 0061)

B▼ ▲A

Extended Delay  
4 min (1-8)  
(0312 - 0362)

B▼ ▲A

Siren Timeout  
4 min (1-30)  
(0313 - 0363)

B▼ ▲A

Sleep Time  
22:00 (00:00-23:50)  
(0314 - 0364)

B▼ ▲A

No Usage time  
none (2-255 min)  
(0315 - 0365)

B▶  
◀A

## LIGHT CONTROL

#▼ ▲\*

### PARTITION

#▼ ▲\*

Entry Lights  
None (3-9)  
(0400 - 0450)

B▼ ▲A

House Code  
1B 2C 3D 4E 5F 6G  
(0401 - 0451)

B▶  
◀A

B▶ **TOUCHPAD  
OPTIONS** ◀A

#▼ ▲\*

GLOBAL  
#▼ ▲\*

Latchkey Zones  
None (1-96)  
(0500)

B▶ **PARTITION** ◀A  
#▼ ▲\*

Fire Panic  
On Off  
(0510 - 0560)

B▼ ▲A

Auxiliary Panic  
On Off  
(0511 - 0561)

B▼ ▲A

Police Panic  
On Off  
(0512 - 0562)

B▼ ▲A

Keychain TP Arm  
On Off  
(0513 - 0563)

B▼ ▲A

Star is No Delay  
On Off  
(0514 - 0564)

B▶ **REPORTING** ◀A

#▼ ▲\*

GLOBAL  
#▼ ▲\*

24-Hour Tamper  
On Off  
(06000)

B▼ ▲A

Antenna Tamper  
On Off  
(06001)

B▼ ▲A

Buffer Control  
On Off  
(06002)

B▼ ▲A

Back In Service  
On Off  
(06003)

B▼ ▲A

Bypass Reports  
On Off  
(06004)

B▼ ▲A

Low CPU Battery  
On Off  
(06005)

B▼ ▲A

Battery Restoral  
On Off  
(06006)

B▼ ▲A

Buffer Full Report  
On Off  
(06007)

B▼ ▲A

Zone Restorals  
On Off  
(06008)

B▼ ▲A

Two Trip Error  
On Off  
(06009)

B▼ ▲A

TP Panic Rpt Fmt  
On Off  
(06010)

B▼ ▲A

AC Failure  
On Off  
(06011)

B▼ ▲A

Receiver Failure  
On Off  
(06012)

B▼ ▲

RF Low Bat Rpt  
Daily Weekly  
(06013)

B▶ **PARTITION** ◀A  
#▼ ▲\*

Opening Reports  
On Off  
(06100 - 06600)

B▼ ▲A

Closing Reports  
On Off  
(06101 - 06601)

B▼ ▲A

No Activity  
On Off  
(06102 - 06602)

B▼ ▲A

Duress Option  
On Off  
(06103 - 06603)

B▼ ▲A

Force Armed  
On Off  
(06104 - 06604)

B▼ ▲A

Latchkey Format  
On Off  
(06105 - 06605)

B▼ ▲A

Freeze Alarm  
On Off  
(06106 - 06606)

B▼ ▲A

Freeze Temp  
42 (40-90)  
(06107 - 06607)

B▼ ▲A

Alarm Verify  
On Off  
(06108 - 06608)

B▼ ▲A

System Tamper  
On Off  
(06109 - 06609)

B▼ ▲A

Report Confirm  
On Off  
(06111 - 06611)

B▶ RF Supv Rpt  
Daily Weekly  
(06014) ◀A

B▶ Swinger Limit  
1 (1-2)  
(06015) ◀A

Ground Fault  
On Off  
(06017)

B▼ ▲A

B▶ Aux Power Fail  
On Off  
(06016) ◀A

B▶ **SIREN OPTIONS** ◀A

#▼ ▲\*

GLOBAL

#▼ ▲\*

Immediate Beeps  
On Off  
(0700)

B▼ ▲A

Disable Trbl Beeps  
On Off  
(0701)

B▼ ▲A

UL 98 Options  
On Off  
(0702)

B▼ ▲A

Global Fire  
On Off  
(0703)

B▼ ▲A

Silent Panic  
On Off  
(0704)

B▶ PARTITION ◀A

#▼ ▲\*

Siren Verify  
On Off  
(0710—Ptn 1 only)

B▶ **SENSORS** ◀A

#▼ ▲\*

LEARN SENSORS (080)

#▼ ▲\*

Sensor Partition  
1 2 3 4 5 6

#▼ ▲\*

Sensor Group  
0

#▼ ▲\*

Trip Sensor  
n

B▶ SENSOR TEXT (081) ◀A

#▼ ▲\*

Text for Sensor  
n

#▼ ▲\*

Sensor n Item 0  
0 -

B▶ DELETE SENSORS (082) ◀A

#▼ ▲\*

#▼ ▲\*

Delete Sensor  
n

#▼ ▲\*A

Delete Sensor n  
Done

B▶ EDIT SENSORS (083) ◀A

#▼ ▲\*

Sn P1 Gnn  
NC/NO/TP  
RF/HW

#▼ ▲\*

Sensor Partition  
n

#▼ ▲\*

Sensor Group  
n

**AUDIO VERIFICATION**

- #▼ ▲\*
- PARTITION 1
- #▼ ▲\*
- Audio Verify  
On Off  
(09000)
- B▼ ▲A
- Audio Mode  
1  
(09001)
- B▼ ▲A
- Fire Shutdown  
On Off  
(09002)
- B▼ ▲A
- Silent Talkback  
On Off  
(09003)
- B▼ ▲A
- Access Timeout  
90 sec (30-300)  
(09004)
- B▼ ▲A
- Beep Delay  
2 sec (0-300)  
(09005)
- B▼ ▲A
- Access Code  
\*\*\*\*  
(09006)
- B▼ ▲A
- VOX Mic Gain  
14 (01-64)  
(09007)
- B▼ ▲A
- VOX Gain Range  
64 (01-64)  
(09008)
- B▼ ▲A
- Manual Mic Gain  
04 (cannot change)  
(09009)
- B▼ ▲A
- VOX RX Gain  
08 (01-10)  
(09010)


**ACCESSORY MODULES**

- #▼ ▲\*
- BUS DEVICE B▶  
◀A SNAPCARDS  
(see next page)
- #▼ ▲\*
- Unit - ID  
On Off  
(10000 - 10015)
- #▼ ▲\*
- CHANGE ID B▶  
◀A Device ID  
nnnnn
- #▼ ▲\*
- DEVICE PARTITION B▶  
◀A Partition Assign  
1 2 3 4 5 6
- #▼ ▲\*
- KEYPAD OPTIONS B▶  
◀A Status Beeps  
On Off B▶ Key Beeps  
On Off ◀A
- #▼ ▲\*
- ENERGY OPTIONS B▶  
◀A Freeze Temp  
42° F (40°-90° F) B▶ Temperature  
40°-90° F B▶ Temperature  
40°-90° F ◀A
- #▼ ▲\*
- OUTPUTS B▶  
◀A Output n B▶ Partition Assign  
1 2 3 4 5 6 B▶ Configuration  
\*\*\*\*\* ◀A
- #▼ ▲\*
- CELLULAR OPTIONS B▶  
◀A Cellular System  
A B

**ACCESSORY MODULES (cont.)**

- B▶  
◀A SNAPCARDS

**ACCESSORY  
MODULES (cont.)**

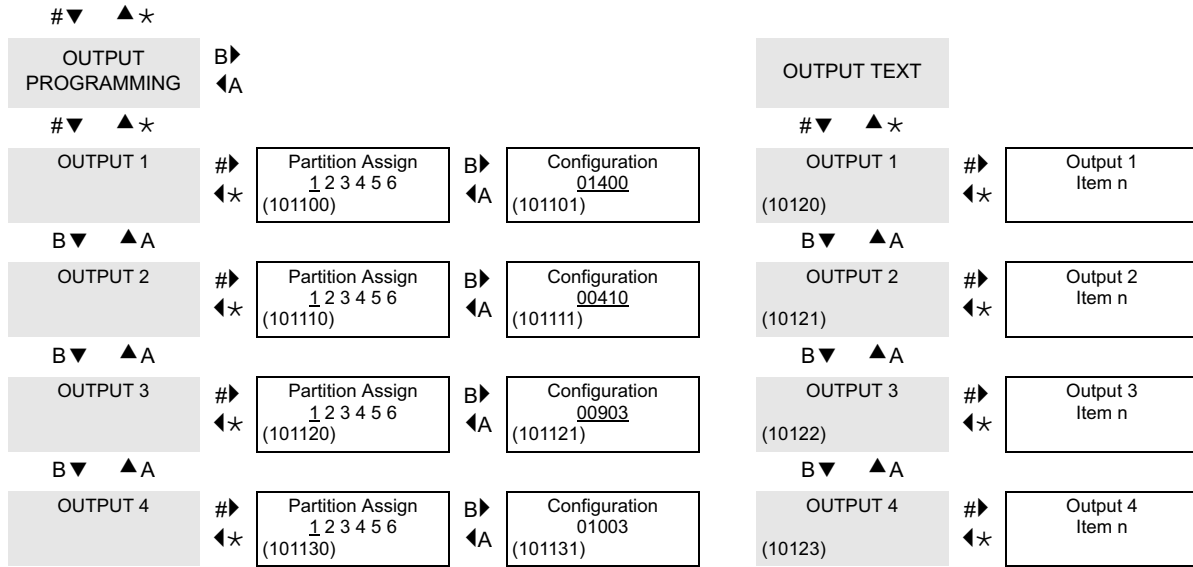

B▶  
◀A **ONBOARD OPTIONS**

