


Panel terminals

Figure 5 below shows an overview of panel terminals. The following sections provide details on how to connect devices to the panel.

Figure 5: Panel terminals

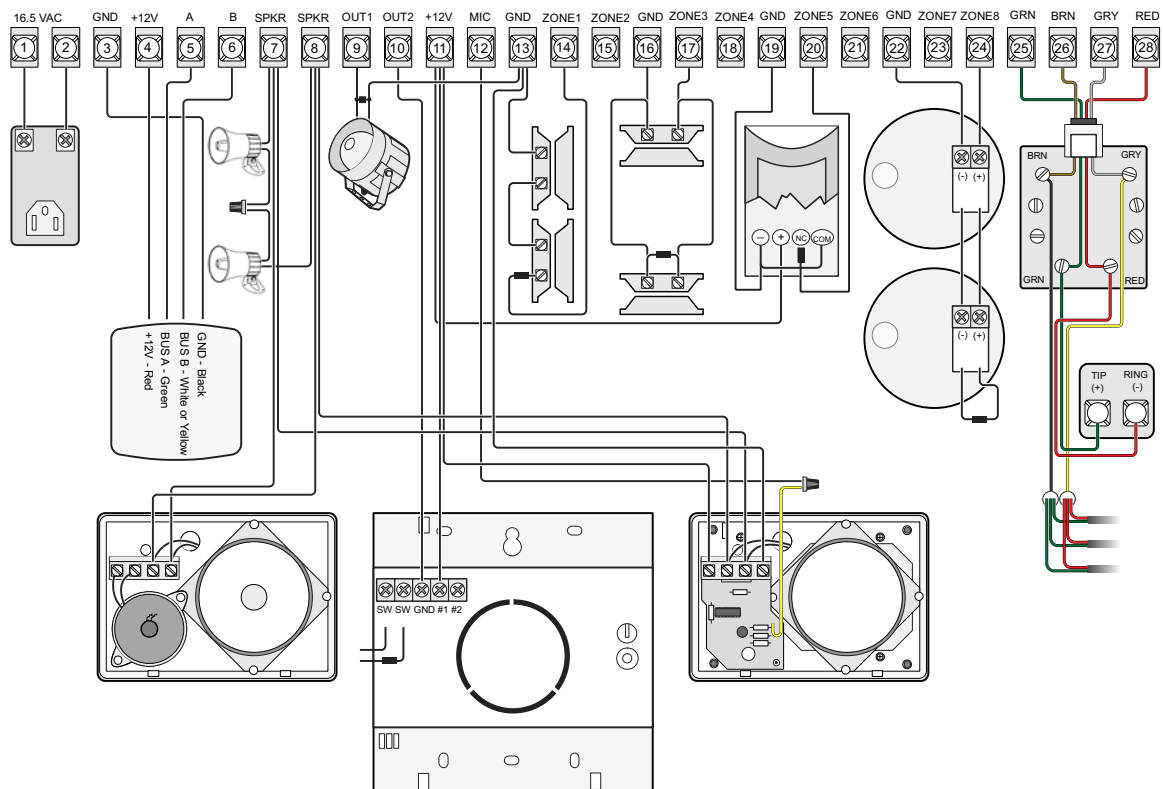

Zones

The panel comes with factory programmed onboard hardwired zones. Install 2 kohm, end-of-line (EOL) resistors on all unused factory programmed onboard hardwired zones. If you don't want to install EOL resistors, delete any unused zones from memory.

Zone inputs 1 through 8 are supervised using the included 2-kohm, end-of-line resistors at the last device on each circuit. All eight zones accept either normally open (NO) or normally closed (NC) detection devices.