

5' Cedar 1800 Traditional Bench w/ Slant Brace Assembly Instructions


Please read through instructions entirely before beginning assembly.

Parts

- 2- Bench Legs
- 1- Bench Top
- 1- Slant Brace

Hardware


- 12- 2 1/2" Square Head Screws
- Square Head Bit (included)

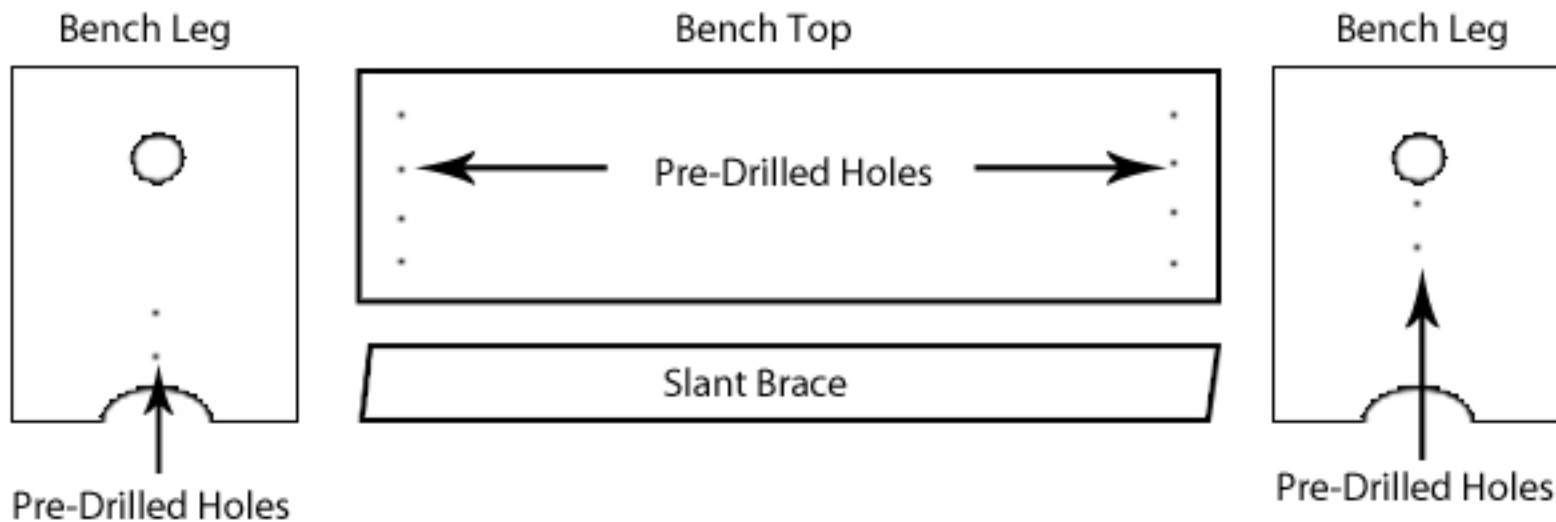

Step 1. Lay out and identify all parts.

Step 2. Lay the bench top on a clean flat surface. we recommend using the box the item was shipped in. Line the bench leg up with the predrill holes in the bench top. Use Four (4) 2 1/2" screws to attach the leg to the bench top.

Step 3. Repeat Step to on the other side with the second bench leg.

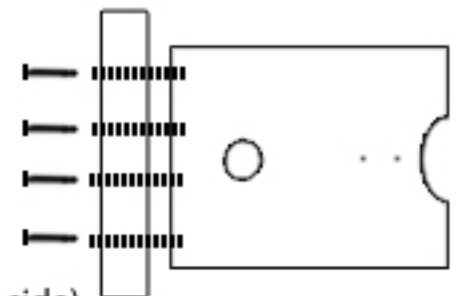

Step 4. Attach the slant brace using four (4) 2 1/2" screws (2 on each side) through the pre-drilled holes. The brace ends are cut on a slight angle. Be sure to attach the brace with the angled cut in the correct position. See image below.

