

5' Cedar 1805 Traditional Bench Assembly Instructions


Please read through instructions entirely before beginning assembly.

Parts

- 2- Bench Legs
- 1- Bench Top
- 1- Bottom Brace
- 2- Bench Sides

Hardware

- 26- 3" Square Head Screws
- Square Head Bit (included)

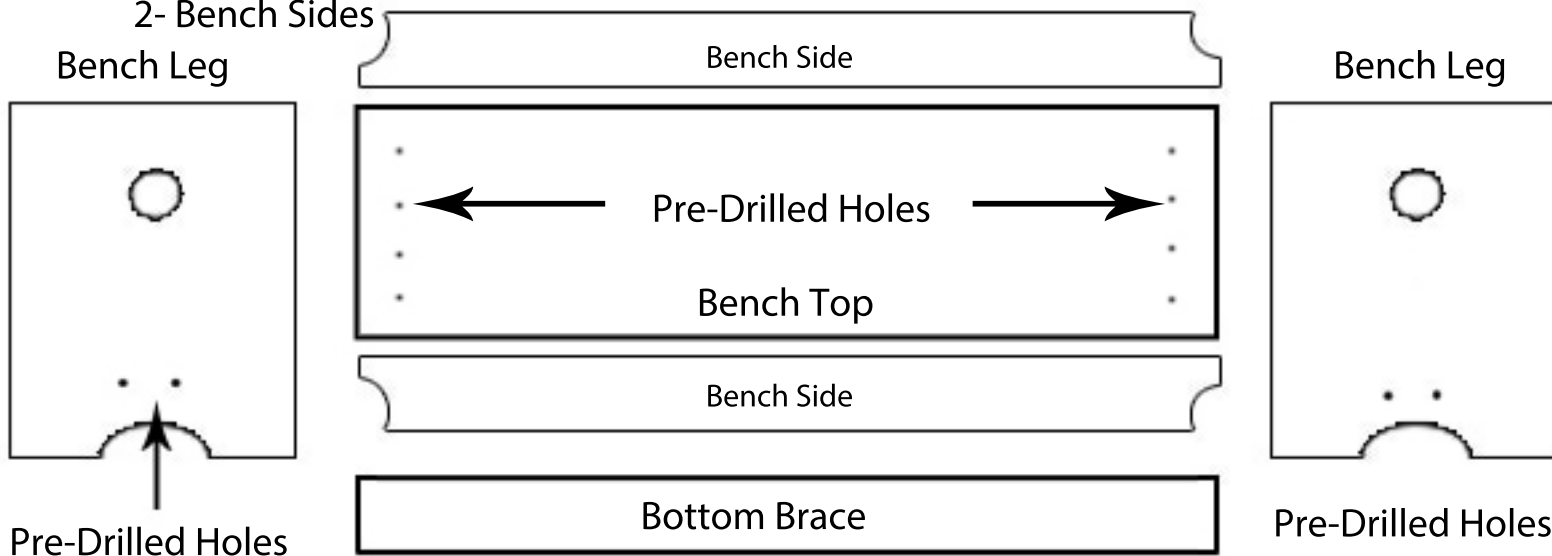


Step 1. Lay out and identify all parts.

Step 2. Lay the bench top on a clean flat surface. We recommend using the box the item was shipped in. Line the bench leg up with the predrill holes in the bench top. Use Four (4) 3" screws to attach the leg to the bench top.

Step 3. Repeat Step two on the other side with the second bench leg.

Step 4. Attach the bench side using fourteen (14) 3" screws (7 on each side) through the pre-drilled holes.

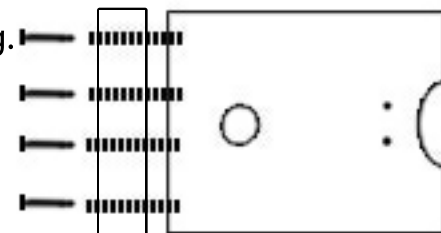

Step 5. Attach the bottom brace using four (4) 3" screws (2 on each side) through the pre-drilled holes.

