

Cedar Garden Chair Assembly Instructions

The item can be found on
www.CedarwoodFurniture.com

————— Please read through instructions before assembling product. Call 877-595-8537 to order

Tools Needed for Assembly:

Drill
Pliers and/or 7/16" wrench
Hammer for tapping bolts and screws

Parts List:

1- Back Assembly	2- 1/4 x 5 1/2" Hex Head Bolts (for back and seat joists)
1- Seat Assembly	4- 1/4 x 3" Hex Head Bolts (for legs)
2- Arm & Leg Assemblies	2- 1/4 x 3" Carriage Bolts (for arms)
2- Stabilizer Boards	10-Large Washers (for arm and leg bolts)
8- 1/4" Hex Nuts	4- Small Washers (for back and seat joists)
8- 2" Screws (for stabilizer boards)	

Extra Hardware for Sweetheart Chair only

1- Sweetheart Board
4- 1 3/4" Screws (for sweetheart board)

Extra Hardware for Highback Chair only

2- 5" Boards
8- 1 3/4" Screws (for 5" boards)

Step 1. Lay out and identify them by comparing them with the drawings on the next page.

Step 2. Bolt the seat and back assemblies together with the 5 1/2" bolts using small washers on each end of the bolts. (put one small washer on the bolt before sliding it through the back and seat then use the other small washer on the end, then add the 1/4" nut.)

Step 3. Fasten the arm and leg assemblies to the seat with the 3" bolts. Put a large washer on each end of the bolts. Put one large washer on the bolt. Then slide it through the leg from the outside and then through the seat. Add the other large washer then the 1/4" nut and hand tighten. Fasten the arms to the back with the two 3" carriage (smooth head) bolts. Use a small washer under the 1/4" nut only.

Step 4. Attach one stabilizer board to the front legs, and up against the bottom of the seat, with four short screws, turning it so the notches fit over the legs. Do the same with the other stabilizer board to the back of the back legs in the same manner.


Step 5. For the Royal Highback and American Sweetheart chairs only. Lay the chair on its back and attach the appropriate 5" wide boards to the back, and on the Highback, also to the front of the seat. Use the 1 5/8" screws provided. Keep the same space between the board and the next slat.

Step 6. Go back over your Garden Chair and tighten all the nuts with a 7/16" wrench or pliers.

*It may periodically be necessary to tighten screws and 1/4" nuts.

Cedar Garden Chair Assembly Instructions

Note: Diagrams below show the American Classic Chair

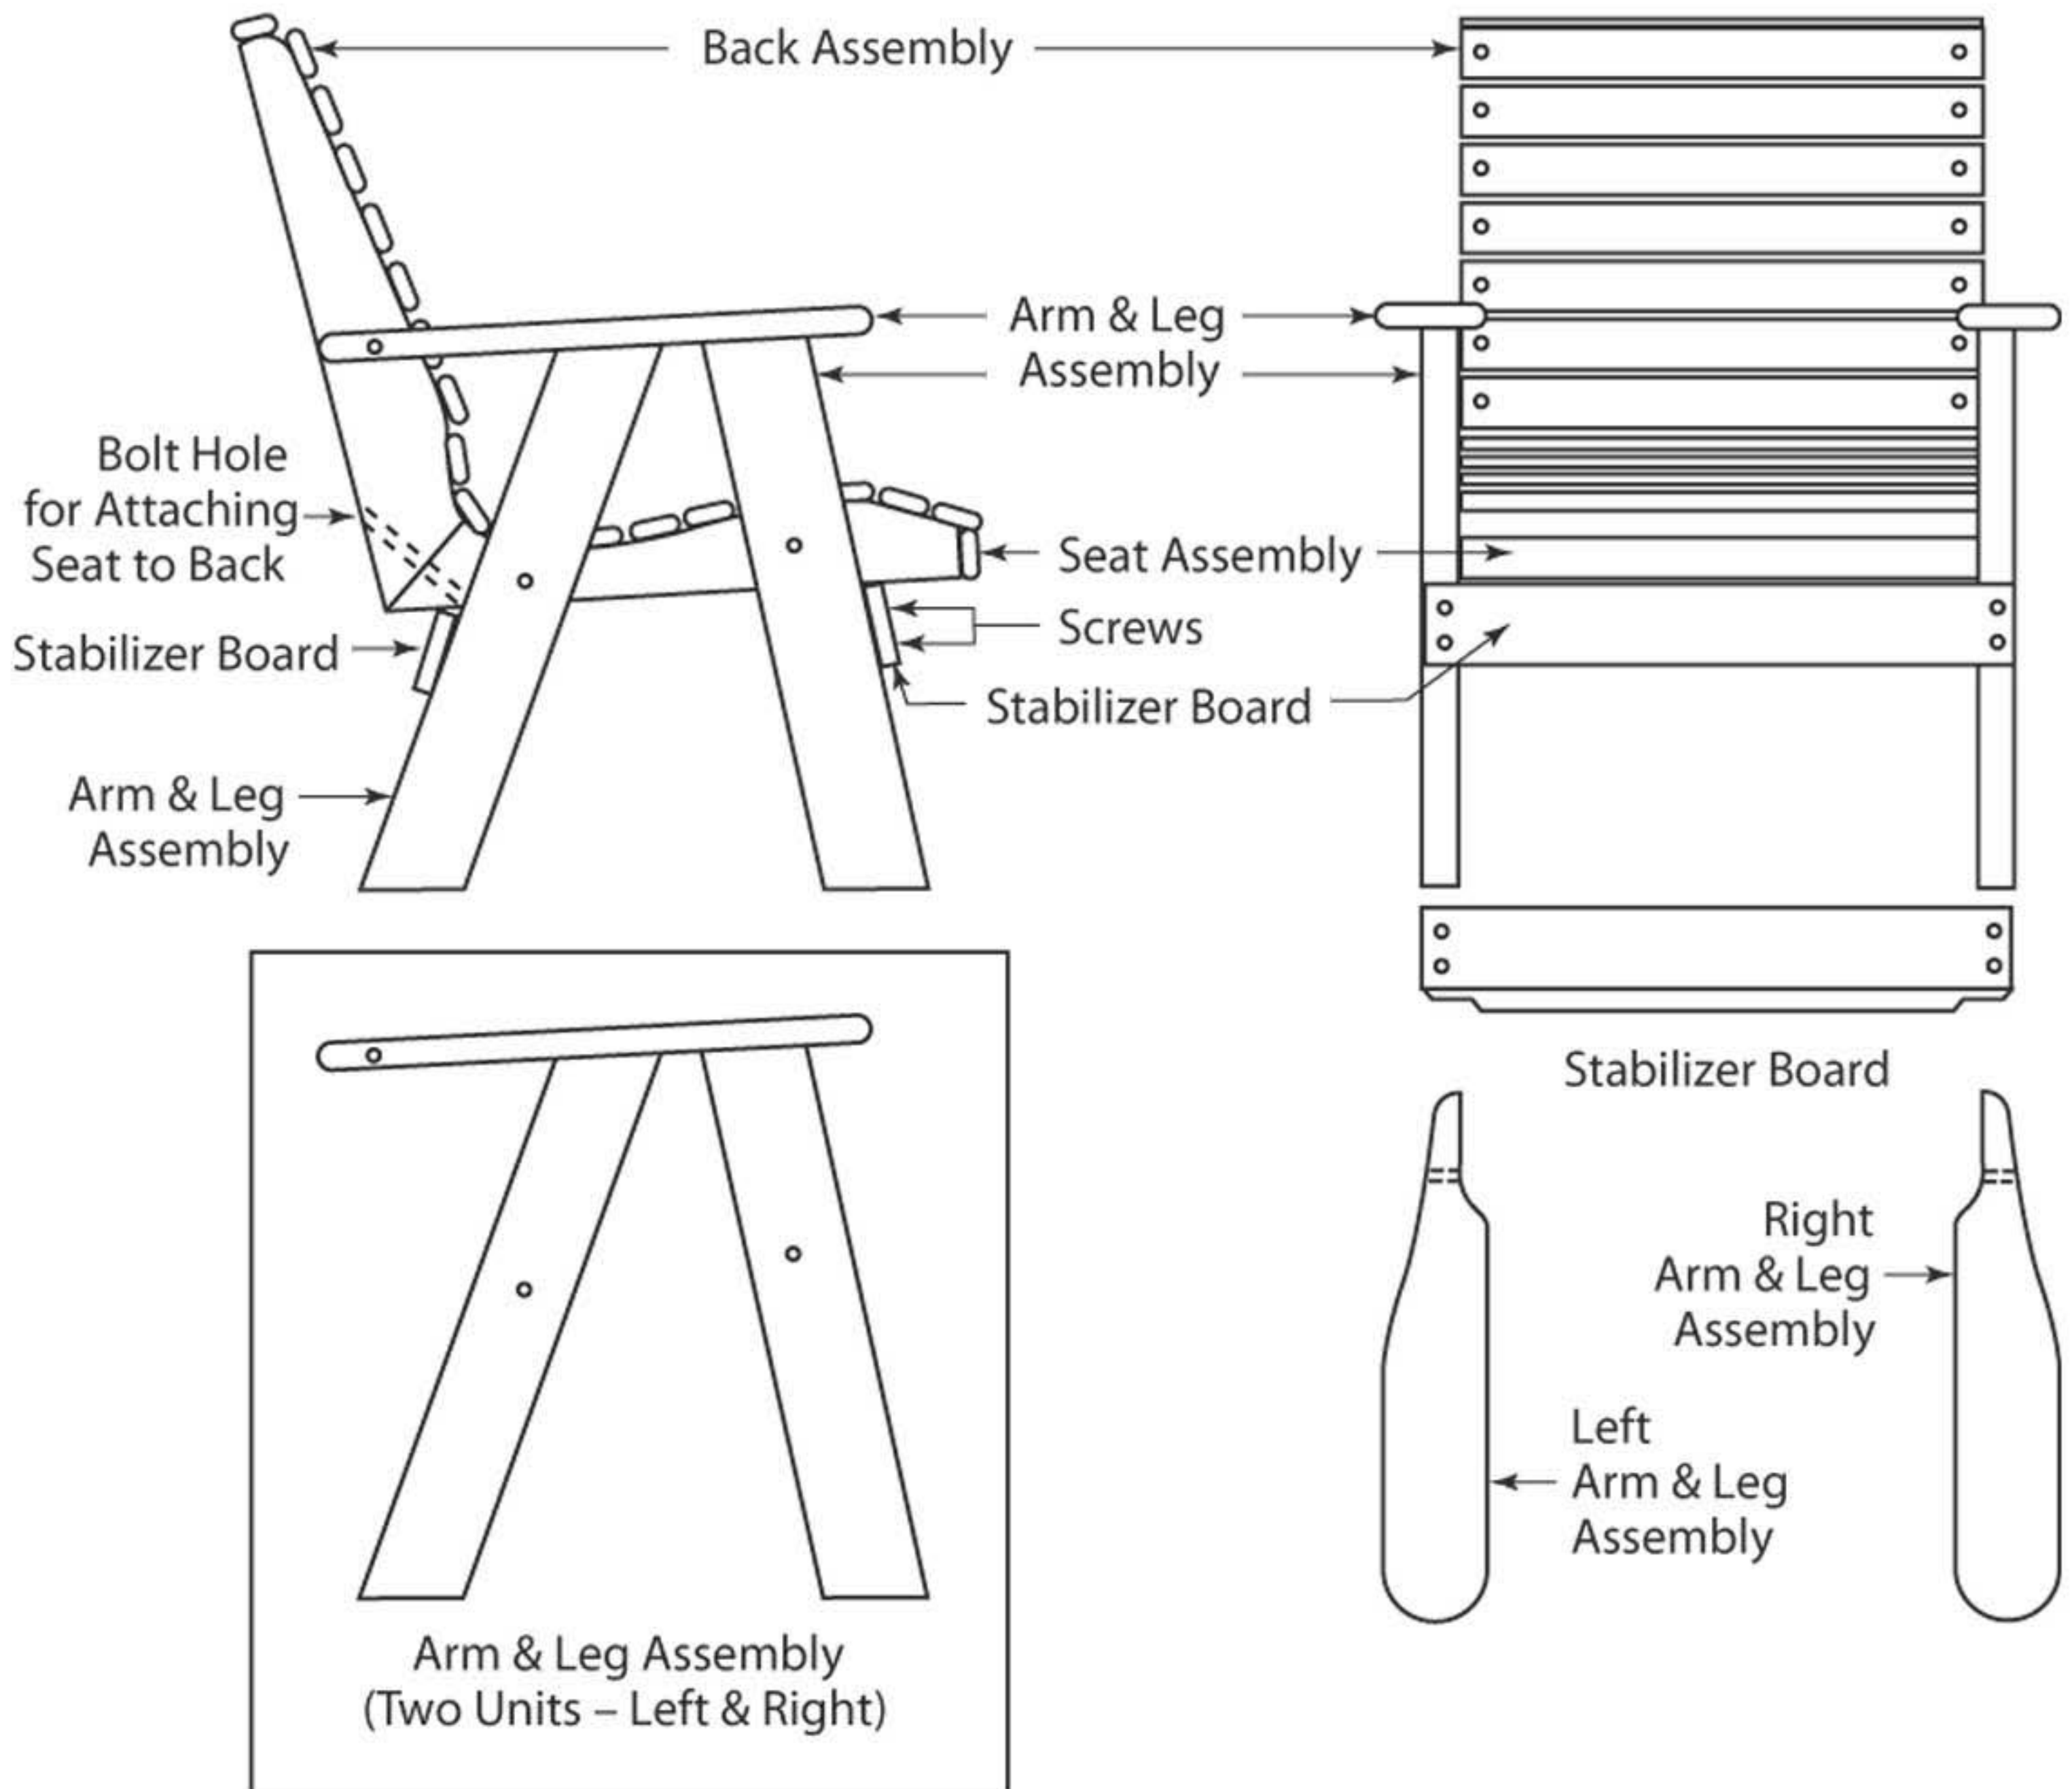

Assembling the 36" and 47" Square Tables

Tools needed for assembly:

7/16" Wrench

Pliers

Hammer

The item can be found on
www.CedarwoodFurniture.com

Call 877-595-8537 to order

Place the table top upside down on a clean flat surface.

Take a leg and turn it to the notches in the larger end fits over the skirting, making the outside of the leg even with the outside of the skirting.

Put a washer onto a bolt, push the bolt through one of the holes in the skirting, through the leg.

Put another washer and a nut on the other end of the bolt.

Finger tighten.

Do the other one, then tighten them up with a 7/16" wrench.

Do not over tighten!

Repeat with the other 3 legs.

Set the table upright and use.



Part List for Square Tables

1 – Table Top

4 – Legs 8 – 3 1/2" Bolts

8 – Nuts

16 – Washers