

RZR 900 DOOR INSERTS INSTRUCTIONS


NEED HELP? Call us at 949-290-2144

Supplied Hardware:

1. 2 - Small Rear Panel Z Clips
2. 2 - 1/4-20 Nut clips
3. 8 - 1/4-20 Washers
4. 6 - 1/4-20 Nylon Lock-nut
5. 4-1/4-20 3/4" Bolts
6. 4-1/4-20 Button Head Cap Screws

Required Tools:

1. T40 Torx Socket
2. T30 Torx Socket
3. T25 Torx Socket
4. 7/16" Socket & Wrench
5. 13 mm wrench
6. 5/32 Allen Head

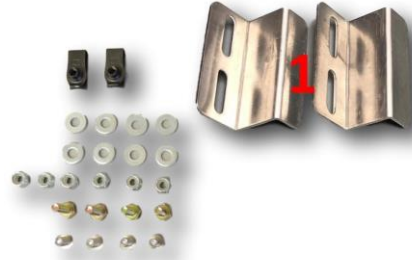

1. Remove the factory torx bolts holding on the stock plastic door outer skin. Remove skin. See White Arrows to Right:



2. Install the door insert. The **RED** arrow will reuse the stock torx bolt. The **BLUE** arrow will use a 1/4-20 Nut clip, 1/4-20 bolt, 1/4-20 washer. The **GREEN** arrow will use a 1/4-20 bolt, 2 1/4-20 washers, 1/4-20 nylon lock-nut. The white arrow will reuse the stock torx bolt and a 1/4-20 washer. Reinstall the plastic cover using the previously removed torx bolts.



TIP: If your door insert is "off" and doesn't seem to fit right inside the RZR's door openings, **LOOSEN** the two torx bolts on the door hinges, and loosen the latch striker plate (The "D" the latch closes on). With those items loose, you can latch the door closed and move the whole door up, down, front, back to center perfectly. Retighten.

3. Next you will be installing the small rear triangle panel. Remove the stock bolt using 2 - 13 mm wrenches.
4. Use the supplied 1/4-20 button head cap screws, 1/4-20 nylon lock nut, and small panel brackets and install them to the small panel as shown. Reinstall the stock rear bolt.

