

# Ambient Weather TX-3102 7-Channel Soil Moisture and Thermometer User Manual



Table of Contents

1. Introduction.....	1
2. Getting Started .....	1
2.1 Parts List.....	1
2.2 Product Overview.....	1
2.3 Getting Started.....	2
2.4 Temperature Reading .....	3
2.5 Moisture Reading .....	3
3. Synchronizing with your Display Console.....	4
4. Sensor Placement .....	5
5. Specifications.....	5
5.1 Measurement Specifications.....	6
5.2 Power Consumption .....	6
6. Troubleshooting Guide.....	6
7. Liability Disclaimer .....	8
8. FCC Statement .....	8
9. Warranty Information.....	9

## 1. Introduction

Thank you for your purchase of the Ambient Weather TX-3102 Soil Moisture and Thermometer User Manual. This is an accessory or replacement for your exiting Display Console or Weather Station. This is not a standalone device.

The following user guide provides step by step instructions for installation, operation and troubleshooting. To download the latest full sized manual and additional troubleshooting tips, please visit:

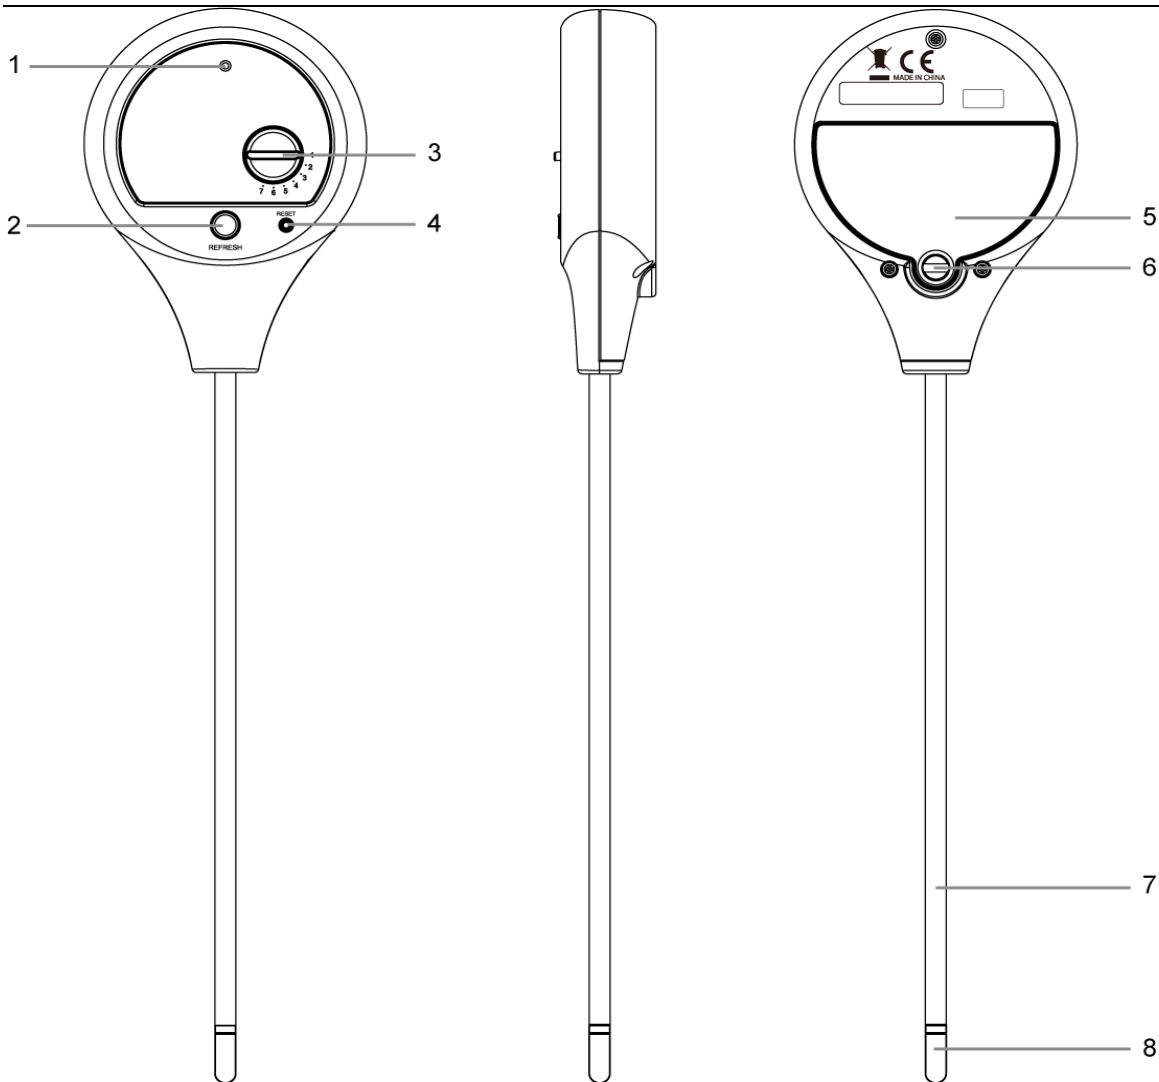
[AmbientWeather.net/help](http://AmbientWeather.net/help)

## 2. Getting Started

### 2.1 Parts List

QTY	Item
1	Soil Moisture and Thermometer Dimensions (L x W x H): 65 x 257.5 x 23.5 mm (2.56 x 10.14 x 0.93")
1	User Manual

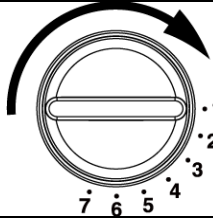
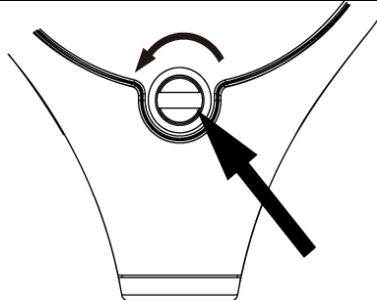
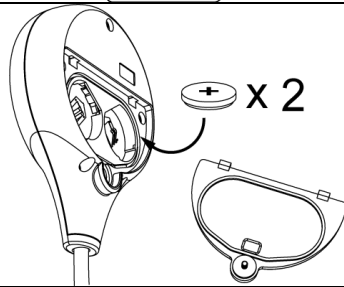
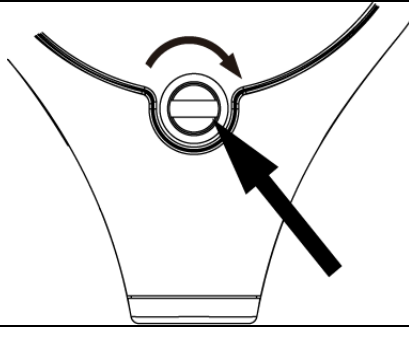
### 2.2 Product Overview



1	LED indicator. Blinks once during transmission.	5	Battery compartment. Accommodates 2 x CR2032 button cells.
2	<b>REFRESH</b> button. Automatically forces transmission.	6	Battery door screw
3	<b>CHANNEL</b> switch Assign each sensor to a different channel 1, 2, 3, 4, 5, 6 or 7. Press <b>RESET</b> after selecting the channel.	7	Sensor metal probes
4	<b>RESET</b> button.	8	Moisture sensor

**Figure 1**

### 2.3 Getting Started

<p>Select the sensor channel by using <b>CHANNEL</b> rotatory selection switch. For example: Channel 1 is selected.</p>	
<p>Turn the battery door screw counter clockwise to open the battery door.</p>	
<p>Insert 2 x CR2032 button cells into the battery compartment. Make sure the polarity is correct. Check the information marked on the battery compartment.</p>	
<p>Cover the battery door and turn the door screw clockwise to close the battery door.</p> <p><b>Note:</b> Make sure the water tight O-ring is properly aligned in place to ensure water resistivity.</p>	

**Figure 2**

## 2.4 Temperature Reading

The temperature probe measures the temperature at the probe tip.

## 2.5 Moisture Reading

The Soil moisture can be characterized by five different levels: Very Dry, Dry , Moist, Wet and Very Wet.

To determine the soil moisture, the sensor measures 16 points, and correlates them into percent moisture value:

Points	Percentage	Level
1	0%	Very Dry
2	7%	
3	13%	
4	20%	
5	27%	
6	33%	Dry
7	40%	
8	47%	
9	53%	
10	60%	Moist
11	67%	
12	73%	
13	80%	Wet
14	87%	
15	93%	Very Wet
16	99%	

**Figure 3**

**Note:**

The measurement accuracy of the sensor can be affected by the soil condition. For example, loose soil may measure a lower moisture level than dense soil.

**3. Synchronizing with your Display Console**

Refer to the User Manual for your display console to locate specific buttons. After installing the batteries in the wireless thermometer, place the sensor about 10 feet from the display console, and press the **SENSOR** button on the console to manually receive the sensor signal.

The signal icon will flash until the reception is successful. If no signal is received within 5 minutes, the icon will disappear.

**NOTES:**

If the signal for Channel 1-7 is lost and does not recover for 15 minutes, the temperature may display “Er” for the corresponding channel, depending on the model of your console.

If the signal does not recover for 48 hours, the “Er” display will display all of the time (depending on the model of your console). Replace the sensor batteries and press the **SENSOR** button on the console to pair again.

#### 4. Sensor Placement

1. Place the sensor within 100 feet of the display console.
2. Insert the probe at least 4" into the soil.
3. Avoid transmitting through solid earth or ground (Figure 4)
4. Place the console at least three feet away from computers, TVs and wireless phones.
5. Avoid transmitting through solid metal barriers.

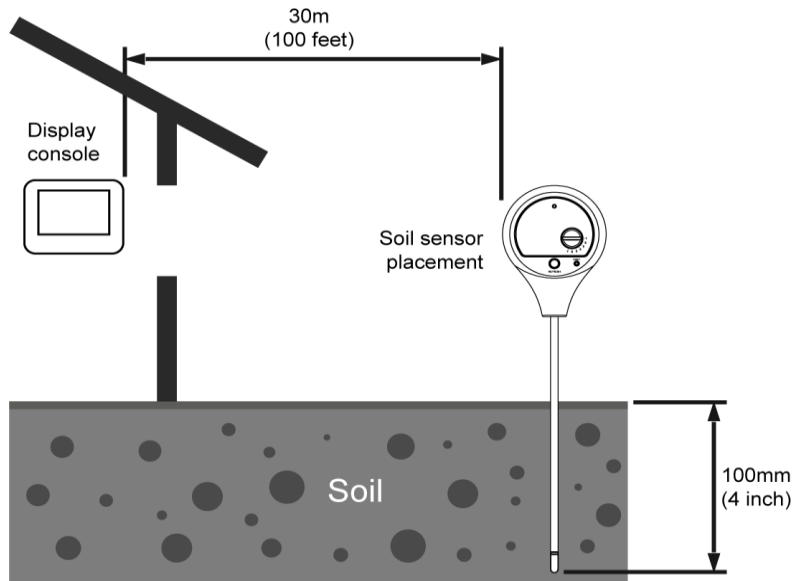


Figure 4

#### 5. Specifications

## 5.1 Measurement Specifications

The following table provides specifications for the measured parameters.

Measurement	Range	Accuracy	Resolution
Temperature	-4 to 140 °F	32 to 104°F: ± 1.8°F (0 to 40°C: ± 1°C)  < 32 °F: ± 3.6°F (<0°C: ± 2°C)  > 104 °F: ± 3.6°F (> 40°C: ± 2°C)	0.1 °F/°C
Moisture	1-16 (0 to 99%)	+/- 1 point at 4 inches (10cm) below the ground and at an air temperature of 25°C (77°F).  Soil moisture is impacted by the type, content and density of the soil.	1 point (about 7%)

## 5.2 Power Consumption

Wireless Sensor: 2 x CR2032 button cells

Transmission Interval: Once every 5 minutes. You can also transmit manually by pressing the **REFRESH** button on the sensor.

## 6. Troubleshooting Guide

If your question is not answered here, you can contact us as follows:

1. Email Support: [support@ambientweather.com](mailto:support@ambientweather.com)
2. Technical Support: 480-346-3380 (M-F 8am to 3pm Arizona Time). Note that Arizona does not observe Daylight Savings Time.
3. Please visit [AmbientWeather.net/help](http://AmbientWeather.net/help) for assistance.
- 4.

Problem	Solution
Wireless remote (soil sensor) not reporting in to console.  There are dashes (---) on the display console.	The maximum line of sight communication range is 100' line of sight and 70' under most conditions. Move the console closer to the sensor.  If the sensor is too close (less than 5'), move the sensor assembly away from the display console.  Make sure the wireless sensor LED is flashing. Press the <b>REFRESH</b> button.  Install a fresh set of batteries in the remote sensor.  Make sure the remote sensors are not transmitting through solid metal (acts as an RF shield), or earth barrier (down a hill).  Move the display console around electrical noise

Problem	Solution
	generating devices, such as computers, TVs and other wireless transmitters or receivers.

## 7. Liability Disclaimer

Please help in the preservation of the environment and return used batteries to an authorized depot. The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.

Reading the “User manual” is highly recommended. The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.

This product is designed for use in the home only as indication of weather conditions. This product is not to be used for medical purposes or for public information.

The specifications of this product may change without prior notice.

This product is not a toy. Keep out of the reach of children.

No part of this manual may be reproduced without written authorization of the manufacturer.

Ambient, LLC WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT.

## 8. FCC Statement

### Statement according to FCC part 15.19:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

### Statement according to FCC part 15.21:

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

### Statement according to FCC part 15.105:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The Responsible party:

Company Name: Ambient, LLC

Address : 6845 W. Frye Road Chandler, AZ 85226



## 9. Warranty Information

Ambient, LLC provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and only to the original purchaser of this product. To receive warranty service, the purchaser must contact Ambient, LLC for problem determination and service procedures.

Warranty service can only be performed by an Ambient, LLC. The original dated bill of sale must be presented upon request as proof of purchase to Ambient, LLC.

Your Ambient, LLC warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (lack of reasonable and necessary maintenance); (2) damage resulting from failure to follow instructions contained in your owner's manual; (3) damage resulting from the performance of repairs or alterations by someone other than an authorized Ambient, LLC authorized service center; (4) units used for other than home use (5) applications and uses that this product was not intended (6) the products inability to receive a signal due to any source of interference or metal obstructions and (7) extreme acts of nature, such as lightning strikes or floods.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

